

DIGITAL TIRE GAUGE

INSTRUCTIONS:

- Press the "ON/UNIT/OFF" button. Wait for "0.0" PSI or "0.00" Bar or "0.00" Kgf/cm² or "0" Kpa display and bleep sound.
- Place the nozzle of the gauge over the tyre valve. Press firmly to ensure good seal and prevent air seeping.
- Hold gauge on the valve until the reading on the LCD display locks.
- Remove the gauge quickly from the valve and read pressure.
- To retake the reading simply place the nozzle over the tyre valve again and repeat.
- Gauge will automatically shut off 20 or 60 seconds after use. Gauge can be manually turned off by holding the "ON" button down for more than 3 seconds.



Made in China

