 


# Laminator

SL299

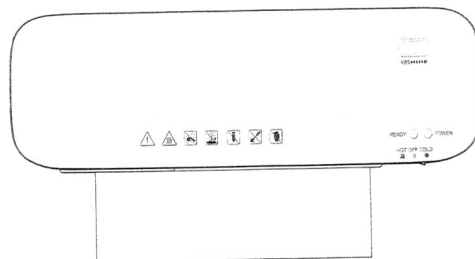

## Operation Manual

Please read all instructions carefully before use.

## Catalog

Caution.....	1
Important safety instructions.....	2
Component name .....	3
Hot lamination .....	4
Cold lamination.....	5
Use of the laminating film .....	6
Using the paper cutter.....	7
Use of the corner rounder .....	8
Clear film jam.....	9
Care and cleaning .....	10
Troubleshooting .....	11
Specification.....	12
Customer service guarantee .....	12

## Warning



1. Never leave children unattended when the laminator is on or plugged in.



3. Be careful not to get your hair drawn



5. pls place it on a flat and stable surface.



8. DO NOT use the unit in areas where gasoline, paint, or flammable liquids are used or stored.

## Attention



1. Pls don't laminate the paper with much ink.



2. Pls don't put your hands in the entrance and outlet and don't push the film by hand



4. Don't disassemble or repair product by yourself



6. Pls correctly plug and unplug the power cord and don't use an extension cord.



9. Don't operate with unit with wet hands



2. Be careful not to splash water on the unit.


Only use foil bags with the correct size (max. Up to A4) and thickness (80 to 100 mic). Foil pockets that are too thin can lead to a blockage inside the device.

## Important safety instructions

When using electrical equipment, especially when children are present, you should always follow the basic safety precautions below. To ensure reliable work with the laminator, please note the following:

1. This device is not intended for people (including children) with limited physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been monitored or taught by a person. Responsible for your security.
2. Please read these instructions carefully and observe them when handling your device.
3. Keep the instruction manual for future use.
4. Do not operate the device if the power cord or plug is damaged.
5. The device is hot when in use. Do not let the heated surface touch bare skin to avoid burns.
6. The device may only be used in dry, closed rooms.  
Always pull the power plug before cleaning the device. Do not use solvents or aggressive cleaning agents.
8. Metal objects cannot be laminated.
9. Pull the mains plug when the device is not in use.
10. Always switch off the device immediately if there is a strong smell or if the device is not in operation.
11. Make sure that the on / off switch is in the "OFF" position before the laminator is connected to the power supply.
12. Insert only the foil pouches intended for this purpose, as specified in the section on performance characteristics, into the device. Film pockets that are too large can cause film jams.
13. Do not laminate heat sensitive materials such as B. Thermal paper.
14. Do not use foil pouches intended for cold lamination when hot lamination. The machine, the film pouch and the document will be damaged.
15. Do not cut foil bags. The resulting cut edges can cause film jams.

## Component name

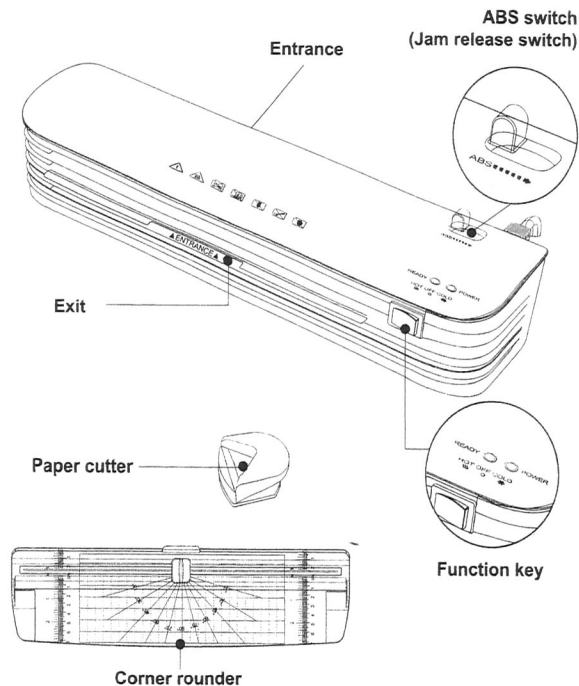

## Hot lamination

- 1, Plug the power cord into an easily accessible standard electrical outlet.
- 2, Turn on the on / off switch on the right side of the device: "HOT", the red indicator lamp lights up
- 3, The drive motor for the transport rollers starts up. After about 3-5 minutes, the operating temperature is reached and the green indicator lamp lights up.
- 4, Place the laminated goods in the film bag so that there is a distance of around 2-6mm from the film edge on all sides.
- 5, Insert the film together with the laminate into the insertion slot of the laminator. The closed side of the film must be inserted first.

## DANGER

- \* Check whether the voltage specification of the device matches that of your electricity network (AC110-120V 60Hz).
- \* Use only hot lamination foils.
- \* To avoid folding the laminating film, the open side of the laminating film must never be inserted into the insertion slot of the laminator first. When inserting the film, please follow the instructions on the insertion slot. The lamination process is automatic.
- \* The emerging film is very hot and soft after lamination. Therefore handle the laminated product carefully.
- \* For leveling, the laminated product can be pressed with a book or other heavy, flat object.

## Cold lamination

- 1, Plug the power cord into an easily accessible standard electrical outlet.
- 2, Turn on the on / off switch on the top right side of the device: "COLD"
- 3, The drive motor for the transport rollers starts, the green indicator lamp lights up.
- 4, Remove the protective film from the film bag.
- 5, Place the laminated goods in the film bag so that there is a distance of about 2-3 mm from the film edge on all sides.
- 6, Insert the film together with the laminate into the insertion slot of the laminator. The closed side of the film must be inserted first.

### DANGER

- \* Check whether the voltage specification of the device matches that of your electricity network (AC110-120V 60Hz).
- \* If you used the laminator for hot lamination shortly before, you must let the laminator cool down. The cooling time takes up to 15 minutes.
- \* To avoid folding the laminating film, the open side of the laminating film must never be inserted into the insertion slot of the laminator first. When inserting the film, please follow the instructions on the insertion slot. The lamination process is automatic.

## Use of the laminating film

- ◆ Please select the correct size of the coated laminating film accordingly the document. The film size includes A4 (220x310 mm), A5 (225x160 mm) and photo size (160x110 mm)
- ◆ Only use film bags of the correct size (max. Up to A4) and Thickness (80 to 100 mic). Too thin foil pockets can cause a blockage inside of the device.
- ◆ The laminating film has sealed on one side. Open the laminate and place the document to be laminated centrally in the film.
- ◆ Have the laminating film held 2-6mm away from the edge of the laminator.
- ◆ Please put the sealed laminating film side (not the open side) in the Entry to start lamination.

Figure 1 Sealed Edge



Figure 2

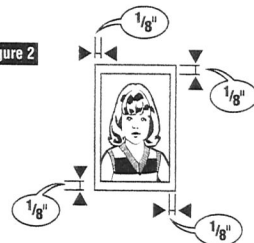 


Figure 3



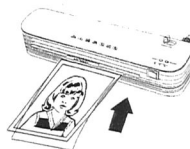 


Figure 4

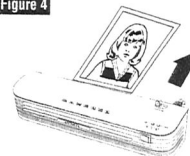 

 **⚠ Note:** Please avoid the following situations

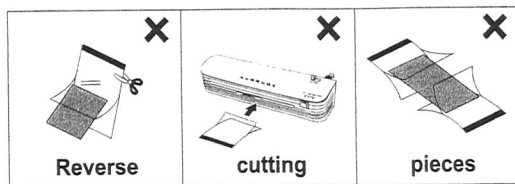

## Using the paper cutter


*The laminator is equipped with a sharp and safe paper cutter, precise grid lines for effortless cutting. Cut documents, photos, images in any (desired) size.*

1. Open the transparent plate, place the document in the paper cutter, align the position and cover the transparent plate.
2. Fix the transparent plate and document with one hand, with the other hand hold the blade and pull or push it to the end.
3. Please clean the debris in the paper cutter before cutting again.

### ANGER

Pay attention to the cutting distance, too close to the edge of the document will destroy the laminating effect.

Move the blade to the center of the paper cutter, then use your fingers to open the transparent plate and take the blade out. Then replace the new blade. We usually don't recommend doing this, improper force can damage the paper cutter.

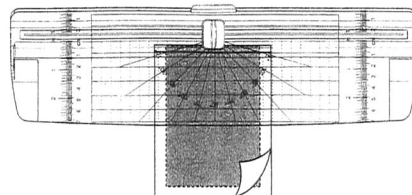

## Use of the corner rounder

*Evenly rounding the corners of documents, photos, pictures etc.*

1. Place the document in the corner filler and promptly push it down. You can take out the document when you hear the sound.
2. After use, you can remove the transparent cover on the bottom and clean crumbs.



### ANGER


Before use, you can check if there are crumbs on the back of the blade. If so, please remove it, otherwise it will affect the cut.

## Clear film jam

This laminator is equipped with the "ABS Jam Release" function

To be able to quickly fix film jams.

1. If the film is blocked, switch off the device and use the "ABS" lever on the Press the right rear of the device to the left.
2. Hold the laminator firmly and pull the film together with the Laminate from the insertion slot of the laminator.

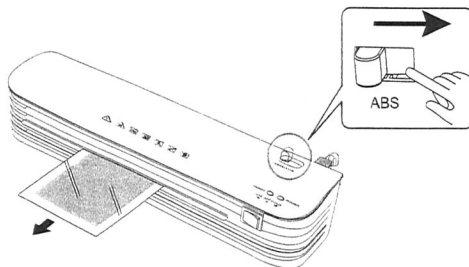


3. After that, the device will probably have to be repeated several times, as described under "Care and Cleaning ", can be cleaned.
4. If the film jams are repeated or if the jam is no longer jammed can be pulled out of the laminator, please contact our hotline (see guarantee).

## Care and cleaning

Deposits and adhesive residues on the transport rollers can affect the lamination result. Therefore, the transport rollers must be cleaned periodically after use will:

To do this, insert a folded sheet of paper into the insertion slot. Adhesive residue are carried away by the emerging paper. The process several times to repeat Always pull the power plug before cleaning the device with a damp cloth. If required, the case can be washed with a mild soap and clear water soaked cloth. Do not use solvents or aggressive cleaning agents.

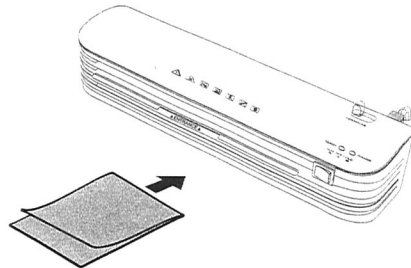

## Troubleshooting

Error	Solutions
<b>Device does not respond</b>	<ul style="list-style-type: none"> <li>✓ If the error is not resolved , please contact our email.</li> </ul>
<b>Film jam</b>	<ul style="list-style-type: none"> <li>✓ Check the size of the foil pouch used.</li> <li>✓ Only use foil bags of the specified size.</li> <li>✓ Make sure that the foil pouch has just been inserted into the device.</li> <li>✓ To clear the jam, follow the instructions under "Clearing the film".</li> </ul>
<b>laminated film is not completely transparent</b>	<ul style="list-style-type: none"> <li>✓ Laminate the same film again to improve the lamination result.</li> <li>✓ When using thicker film (2x80mic to 2x125mic), please let the device warm up longer.</li> </ul>

## Specification

Laminating system	hot roller technology
Working width	230 mm (A4)
Laminating temperature (HOT)	110 - 130 ° C
Max. Lamination width	230mm
Min. Lamination width	54x86mm
Warm-up time	3-5 minutes
Maximum film thickness	80-125 micron
Laminating speed	280 mm / min
Power supply	AC110-120V 60Hz
Power consumption	260W
Dimensions (LxWxH)	351 * 108 * 70 mm
Weight	approx.1.3kg

## Customer service guarantee

Thank you for your order and support! If you have any question about our Products, please contact us at any time! We will give you a satisfactory answer as soon as possible.