



# PARANORMIC Spirit Box EVP Research Device User Manual

[Home](#) » [PARANORMIC](#) » PARANORMIC Spirit Box EVP Research Device User Manual 



User Manual

## Contents


- 1 Spirit Box EVP Research Device
- 2 Precautions
- 3 Included
- 4 Quick Start Guide
- 5 Sweep Direction
- 6 Sweep Speed
- 7 Single Channel
- 8 Battery and Charging
- 9 Modes
- 10 Record
- 11 Playback
- 12 File management
- 13 Line In
- 14 Bluetooth setup
- 15 Documents / Resources
  - 15.1 References
- 16 Related Posts

## Spirit Box EVP Research Device

Thank you for choosing our products.

For your own safety, please read this manual carefully before using the device

**NOTE:** Before use, remove the protective plastic strip from the back of the device by simply pulling it.

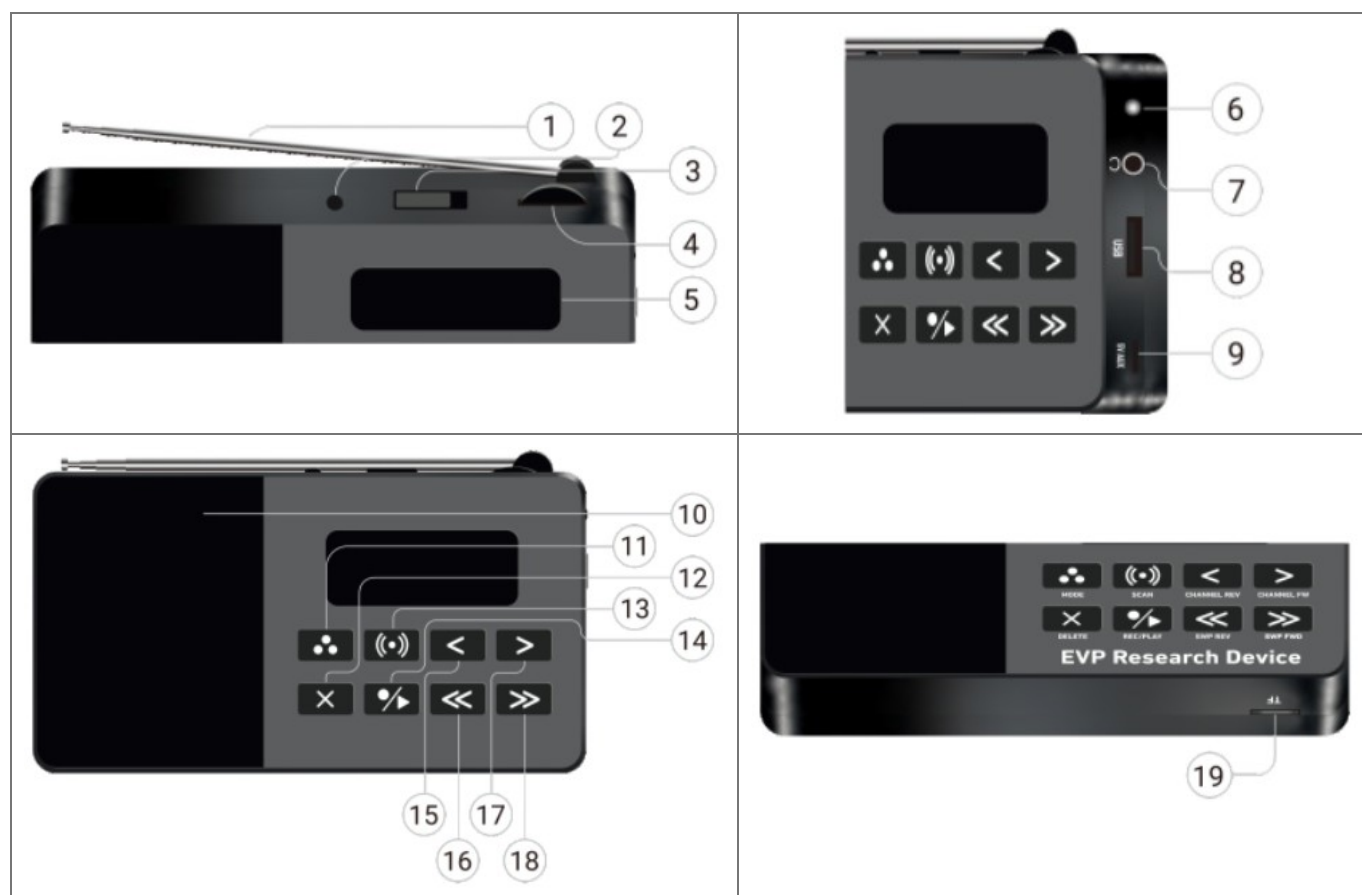

1. Antenna 2. Flashlight Button 3. On/Off 4. Volume 5. Display 6. Flashlight 7. Headphone Port 8. USB Port 9. Charging /Aux Input Port 10. Speaker	11. Modes 12. Delete File 13. Scan 14. Record/Play file in Playback mode 15. Single Channel Back 16. Scan Reverse or Scan Slower 17. Single channel forward 18. Scan Forward or Scan Faster 19. SD Card Slot
---	--

## Precautions

- Read the instructions carefully
- Keep the instructions handy for future reference
- Heed all warnings
- Do not expose the device to water or moisture
- Clean only with a dry cloth
- If the device will not be used for a long time, remove the battery to prevent potential damage due to possible battery leakage
- Only use attachments/accessories specified by the manufacturer. The use of attachments/accessories not recommended by the product manufacturer may cause damage to the device
- Avoid placing the device in direct sunlight or near heating elements or vents

## Included



- Spirit Box
- USB charger cable
- USB data cable

## Quick Start Guide

- Fully charge the device before use
- Turn the device on using the ON/OFF slider button (3)
- Press SCAN (13) to begin FM Scan Forward

## Sweep Direction

- If a sweep is already active you must press SCAN (13) again to stop the current sweep
- SWEEP REVERSE – While the scan is STOPPED hold SWP REV (16) for 2 seconds to sweep in the reverse

direction

- SWEEP FORWARD – While the scan is STOPPED hold SWP FWD (18) for 2 seconds to sweep in the forward direction

## Sweep Speed

- Short-press SWP FWD (18) to make the scan faster
- Short-press SWP REV (16) to make the scan slower

Speed 1	Speed 2	Speed 3	Speed 3
~100ms	~200ms	~300ms	~400ms

## Single Channel

If the sweep is already active, short-press CHANNEL REV (15) or CHANNEL FW (17) to stop the sweep. You can also stop the sweep by pressing the SCAN (13) button.

- Short-press CHANNEL REV (15) to move backward 1/10th frequency (i.e. 95.6fi-n 955fm)
- Short-press CHANNEL EMT (In to move forward 1/10th frequency (i.e. 95.6fm 95.7(m)
- Hold CHANNEL REV (1 5) for 2 seconds to manually sweep in reverse. Once you reach the desired frequency, release the button.
- Hold CHANNEL FW(17) for 2 seconds to manually sweep forward. Once you reach the desired frequency, release the button.

## Battery and Charging

- The Paranormic Spirit Box is powered by a rechargeable battery. 'Ib charge the device, connect the provided micro USB charging cable to a USB power source. While charging, the flashlight's LED will show as red and will turn offonce charging is complete.

To charge the device via an AC power outlet, you will need to use a USB to AC power adapter (not provided).

**NOTE:** We suggest taking the battery out of the spirit box when storing the device. Since the flashlight is always in :standby mode' even when the unit is off it does drain the battery dish\*, over lime.

## Modes

To change modes press the MODE button (11).

- **SCANNING FM**

This mode is used for conducting spirit box sweep sessions using the FM band.

- **SCANNING AM**

This mode is used for conducting spirit box sweep sessions using the AM band.

- **BLUETOOTH**

This mode allows you to connect a Bluetooth audio device to use the spirit box as an external wireless speaker or to connect your wireless headphones.

- **SD CARD**

This mode allows you to play recorded spirit box sessions and other audio files on the memory card or from a USB drive.

## **Record**

To record a sweep, you must first insert a micro SD card into the port at the bottom of the device (19).

**NOTE:** Maximum size for the SD card is 32GB.

To record radio sweep audio, first, start the sweep in the direction you prefer. Once the sweep has begun press REC (14) for 2 seconds. To stop recording press REC (14) for 2 seconds again.

Stop recording after each session to save the file properly.

While recording you can start, pause or change direction on the sweep as you wish.

To access recorded files:

- Remove the SD card from the memory slot (19) and insert it into a computer using any micro SD card reader.
- Plug the spirit box directly into a computer via the USB data port (8) using the provided USB cable.

## **Playback**

To play audio files from the SD card, press MODE (11) to SD CARD:

Press CHANNEL REV (15) or CHANNEL FWD (17) to select a file. The spirit box will play the audio file. Each file is indicated by a number in the sequence

Press PLAY (14) to pause playback.

## **File management**

To delete files, we suggest connecting the spirit box to your computer using the included USB cable, or by inserting the SD card into your computer. Although you can manage and delete files directly on the spirit box, it's much easier to do on a computer.

To delete recorded files directly on the spirit box device, press the MODE (11) button to get into 'Playback' mode. Press CHANNEL REV (15) or CHANNEL FWD (17) until you get to the desired file. Each file is numbered sequentially. Make sure to listen to the file to note which one you want to delete to ensure you don't delete something you want to. To delete the file you are listening to press T (12). This will delete the file PERMANENTLY.

## **Line In**

This mode allows you to plug in an audio device to use the Spirit Box as an external wired speaker. Use the provided 3.5 audio-to-micro USB cable to connect to another compatible audio source.

## **Bluetooth setup**

To initiate a Bluetooth connection between devices:

- Press the MODE (11) button to get into 'Bluetooth' mode
- Make sure Bluetooth is turned ON on your device and search for Bluetooth devices
- The spirit box will be discoverable and show up as 'Paranormic Spirit Box'.
- Once connected you will hear a chime

**Thank You**

## For Choosing Our Product



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### FCC Radiation Exposure statement

The device has been evaluatec to meel general RF exposure requirement. The device can be used in porlable exposure condition without restriction.

## Documents / Resources

	<p><a href="#">PARANORMIC Spirit Box EVP Research Device</a> [pdf] User Manual L688, 2BG6T-L688, 2BG6TL688, Spirit Box EVP Research Device, Spirit Box, Spirit Box Research Device, EVP Research Device, Research Device, EVP Device, EVP, Device</p>
---	---

## References

- [User Manual](#)

### [Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.